

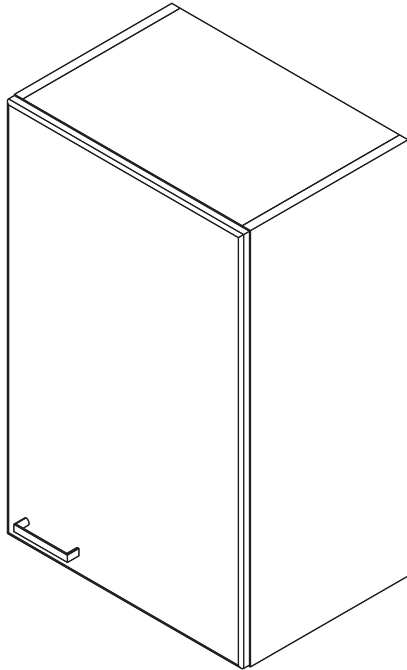
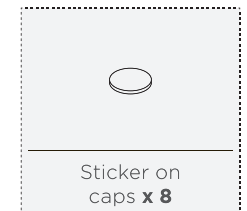


450mm 1 DOOR WALL CUPBOARD


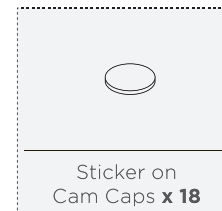





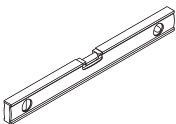





Hardware Included

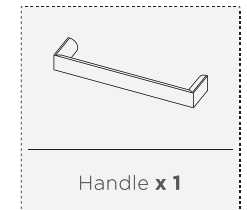

Tools you will need

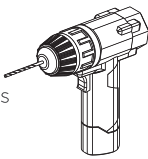

To put your cabinets together you will need the following tools.

 <p>Cordless drill with:</p> <ul style="list-style-type: none"> • Number 2 Phillips head bit • 4.5mm drill bit • Number 12 countersinking drill bit 	 <p>Tape Measure</p>	 <p>Pencil</p>	 <p>Hammer</p>	 <p>Clamps (Quick Release)</p>	 <p>Safety Gear</p>	 <p>Phillips Head Screw Driver</p>
 <p>Spirit Level (900mm recommended)</p>	 <p>Masking Tape</p>	 <p>65mm Wood Screw</p>	 <p>Wall Fixing (If Necessary)</p>			


Important notice

- Make sure you leave plumbing and electrical work to qualified trades people. Never try this yourself.
- If you have any questions contact us on **1800 666 078** Monday to Friday between 8:00am and 6:00pm AEST or email: **info@flatpax.com.au**.


450mm 1 DOOR WALL CUPBOARD

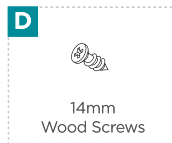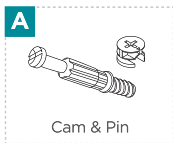


STEP 1

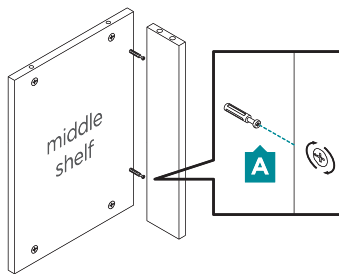

STEP 2

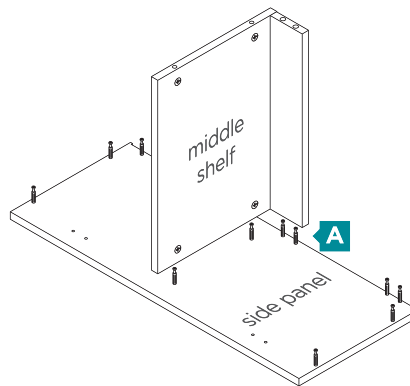


STEP 3

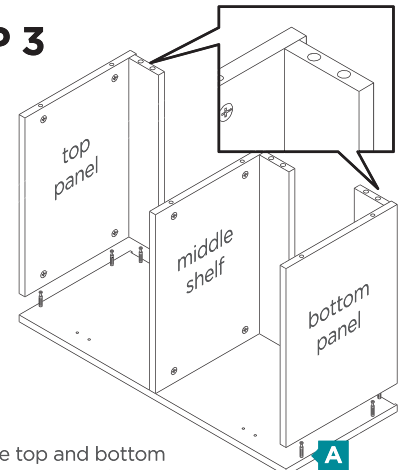


note: The top and bottom panel can be identified by the panel protruding past the support rail 5mm.

STEP 4

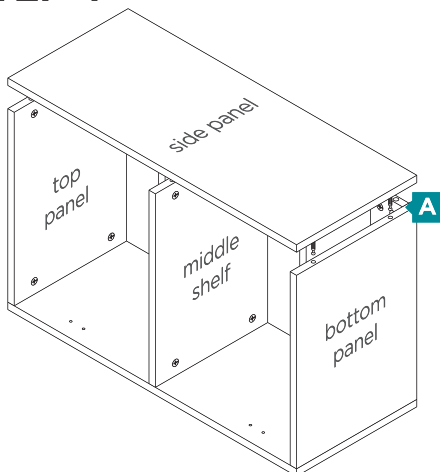


STEP 5

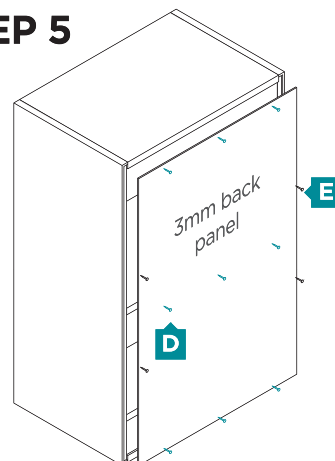


note: The white side of the back panel should face inside the cabinet.


STEP 6

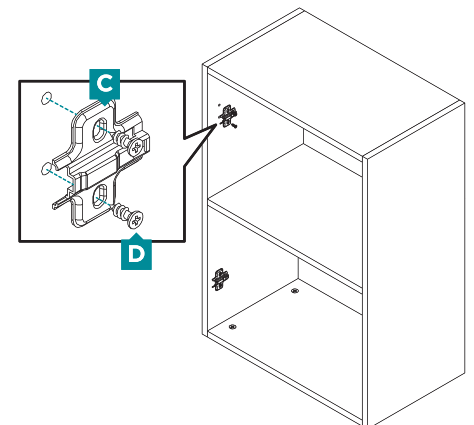


STEP 7

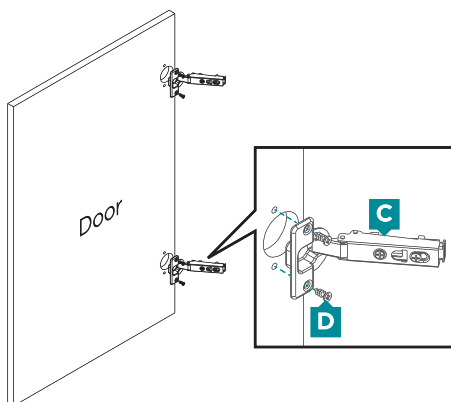


STEP 8

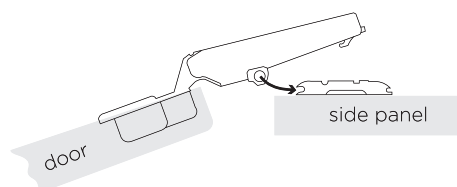


Clip the door onto the hinge plates.

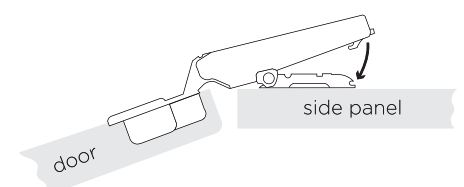

Now push down to clip hinge securely together.

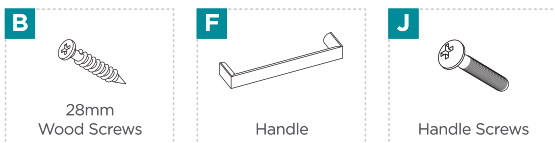


STEP 8

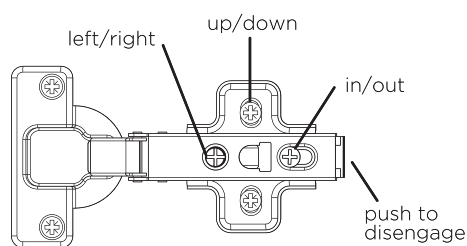


To align doors adjust marked screws.

STEP 9

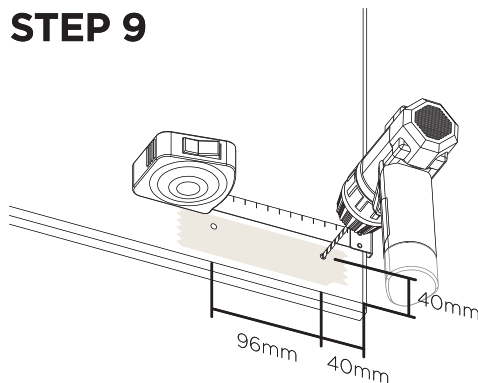


Place masking tape on both sides of the door where holes will be drilled to avoid chipping. Pre-drill using 4.5mm drill bit

STEP 10

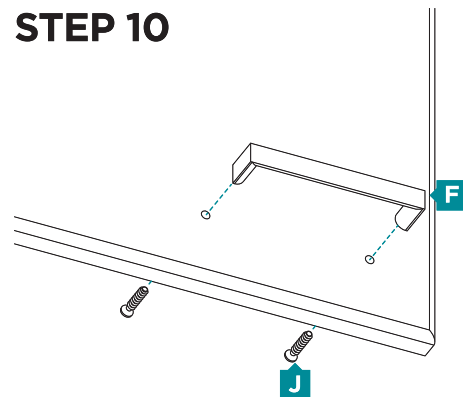


STEP 11

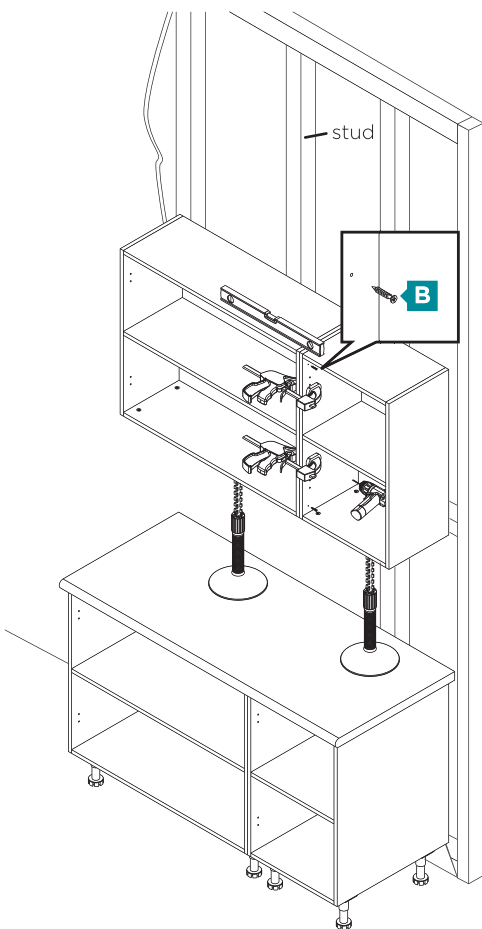

Check cabinets are level then clamp together. Pre-drill using 2mm drill bit and attach cabinets together.

STEP 12

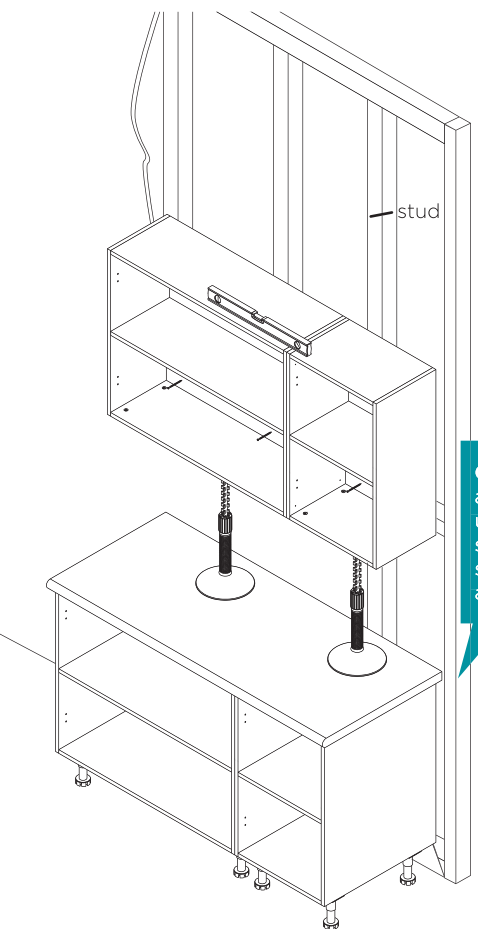

Caution: Please ensure all cabinets are screwed into your timber stud wall using a minimum of 65mm timber screws. If attaching to concrete, brick, steel or any other substrates seek advice from your hardware specialist.