




ACCESSORIES


Wardrobe
www.flatpax.com.au

900mm Drawer Dividers (To suit 900mm Wardrobe Drawers)


Divider x 2




Divider x 4




STEP 1 INSERTING DRAWER DIVIDERS

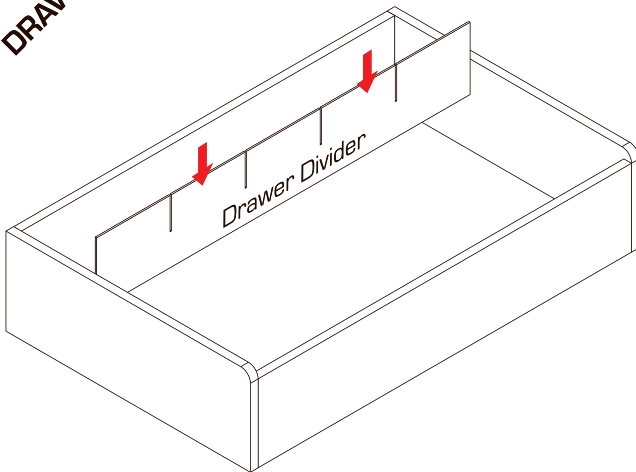

STEP 2 INSERTING DRAWER DIVIDERS

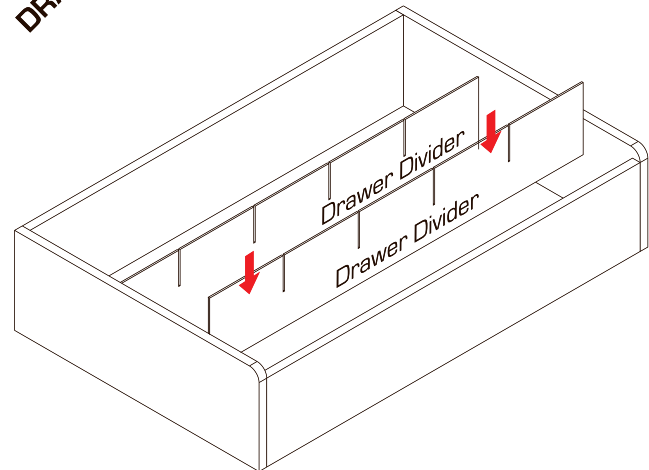


STEP 3 INSERTING DRAWER DIVIDERS

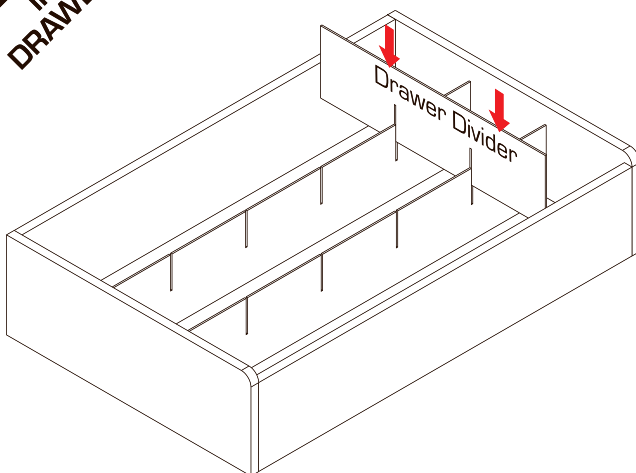

Repeat the process for the remaining drawer dividers.

STEP 4 INSERTING DRAWER DIVIDERS

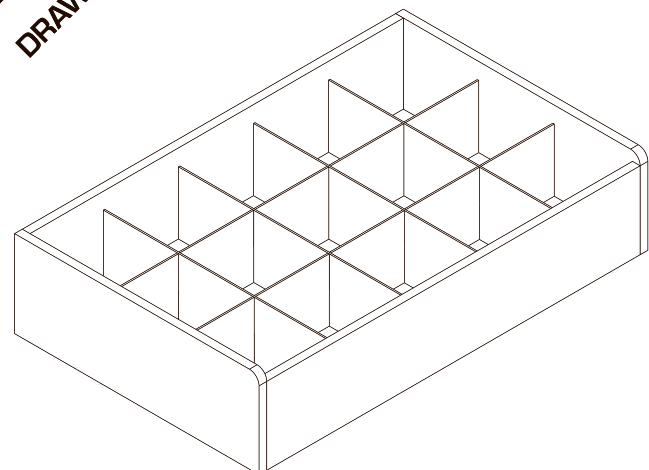

CAUTION ! Please ensure all cabinets are screwed into your timber stud wall using a minimum of 8 gauge, 65mm screws. If attaching to concrete, brick, steel or other sub surfaces seek advice from your hardware specialist. Please ensure you follow the installation and safety instructions located on your cabinet assembly instructions carefully.

For further enquiries visit www.flatpax.com.au or call customer service on 1800 666 078
Between 7:00am - 6:30pm E.S.T Mon - Fri

Ver 1.7